


## Door Handle Installation for HRF3601F


1. Locate the four handles, **four** refrigeration handle holders, **four** freezer handle holders, installation screws for the holders and installation tool;

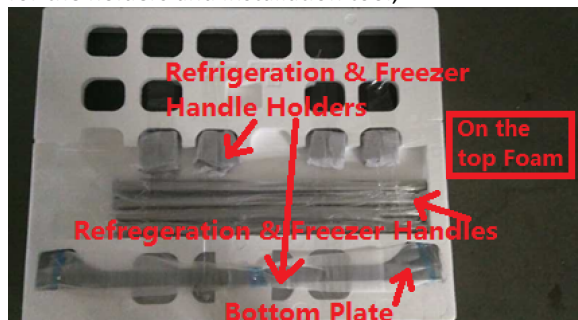

### \*\*\*IMPORTANT\*\*\*

All Handles, Handle Holders and bottom plate are located on the top foam of the refrigerator. **Do not throw away the top foam** before your handle assemblies and bottom plate are fully installed.


2. **Identifying the handle holders:** The shorter handle holders are for the refrigerator door handles. The taller handle holders are for the freezer door handles.

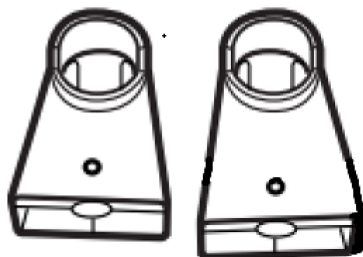

Left: Refrigeration handle holder (4 pcs)

Right: Freezer handle holder (4 pcs)

Please note: The Refrigeration handle holder is marked with a green sticker. The freezer door handle holder is marked with a purple sticker.

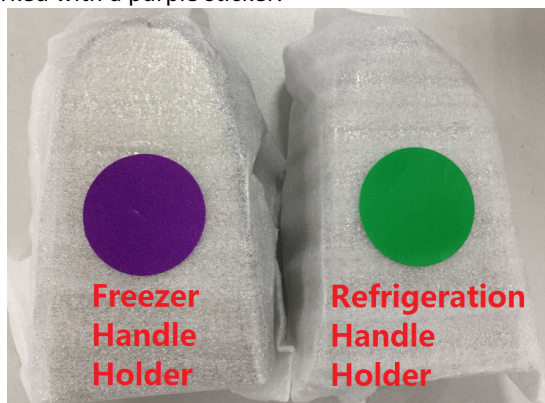

**Identifying the door handles:** The refrigerator door handle is shorter in length than the freezer door handle. In the future, the refrigerator door handles will be marked with a green sticker. The freezer door handles will be

marked with a purple sticker.


3. Use the installation tool to fasten the set screw into the handle holder (**Set screws (10 total) are packaged in the same bag as the user manual, placed in the bottom right drawer of the refrigerator**).



4. Mount one end of the door handle into the holder, making sure the notches insert correctly;



5. Mount the other handle holder to the door and fasten in place by tightening the set screw to the door stud;

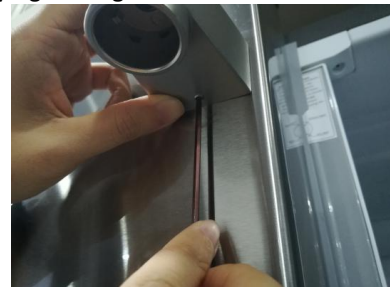

6. Now take the handle (that is fixed with the handle holder on one end) and mount the other end to the handle holder set on the door. Once placed correctly, fasten the set screw on the handle holder to the door stud;



For installation, tech support or parts support, please call 877-288-8099 or email [service@thorgroup.us](mailto:service@thorgroup.us)